

## DAM DRUM 3 FUNCTION CONTROLS

The left knob controls the pitch of the tom pad (red). Right knob controls the bass synth pad (blue).

**PLAY** = Stop and start playback of selected sequence. Light will blink white on the beat.

**REC** = Start and stop additive recording. Any pad played will be added to the sequence. Light blinks red.

**TAP** = Tap tempo.

**SHIFT+PAD** = Change to that color sequence. Light will change to that color.

**SHIFT+TAP+RIGHT KNOB** = Change tempo.

**SHIFT+PLAY** = Reverse samples.

**PLAY+RECORD** = Erase sequence.

Blue pad and yellow pad sequences start with kick on the 1 and 3.

## MIDI

C3: Red pad

D3: Blue pad

E3: Green pad

F3: Yellow pad

A3: Toggle reverse on/off

CC 70: Red pad pitch

CC 71: Blue pad pitch

CC 72: Green pad pitch

CC 73: Yellow pad pitch

---

Questions?

email [drbleep@bleeplabs.com](mailto:drbleep@bleeplabs.com)

website <http://stonesthrow.com/damdrum>

---

Requires a 9 volt battery & a sense of rhythm